

















1		Höfuð Rofi On/Off
2		Start-Stop
3		Minni Hraði Á Viftu Low Speed On Fans
4		Eldunartími / Cooking Time
5		Kjarnhitamælir / Core Probe
6		Hitastig /Cooking Temperature
7		Eldunarkerfi / Cooking System
8		Rakastýring / Humidity
9		Þrepa Eldun / Cooking Phases
10		Afturkalla Aðgerð / Cancel
11		Vista Uppskriftir / Menu Save
12		Staðfesta / Confirm
13		Val / Selection
14		Þvottakerfi / Washing (Optional)
15		Aukning Á Raka / Increase Of Humidity
16		Minnkun Á Raka / Decrease Of Humidity

